

# OPERATING INSTRUCTIONS DOCUMENT

## 1. BREAKDOWN OF THE FUNCTION INTO THREE DIAGRAMS:

- \* Schematic diagram.
- \* Wiring diagram.
- \* Installation diagram.

## 2. CONSTITUTION OF THE DIAGRAMS:

Schematic diagram:

- supplies ( + and -)
- components (with references, function symbols and internal electro-mechanical details, except for electronics)
- connector sockets on components
- earth points
- wire lines (with reference)

Wiring diagram:

- supplies (+ and -)
- components (with references, function symbols, without internal electro-mechanical details)
- interconnections (connectors with references)
- earth points (with reference)
- splices (with reference)
- harnesses (with reference)
- wire references

Installation diagram:

- total or partial ghosted view of the vehicle (in perspective)
- components (position, reference)
- interconnections (position, reference)
- splices (position, reference)
- earth points (position, reference)
- harness (reference, run)
- partition passages

## 3. CODING OF FUNCTIONS:

The principle of this numbering is to attach the component number to an electrical function.

The functions are grouped in 8 families.

### 1. Power unit:

- 10 - starting, current generation
- 11 - ignition system, pre-heating
- 12-13 - fuel system, fuel injection
- 14 - engine diagnostics
- 15 - cooling system
- 16 - gearbox, drive shafts
- 17 - engine electrical supply - accumulator

### 2. Exterior lighting and signaling:

- 20 - rear fog lamps
- 21 - stop lamps
- 22 - reversing lamps
- 23 - direction indicator, side repeater flashers, hazard warnings
- 24 - running lights, headlamp dim-dip (DIM-DIPS)
- 25 - horns
- 26 - headlamps, tail lamps, number plate lamps, side lamps and indicator lamps

3. Interior lighting:

- 30 - passenger compartment lighting
- 31 - closed compartment lighting

4. Driver information:

- 40 - engine coolant and other water information, current generation
- 41 - engine oil information
- 42 - engine speed and engine air information
- 43 - fuel and pre-heating information
- 44 - brake information
- 45 - suspension information
- 46 - gearbox and transmission information
- 47 - audible warning information
- 48 - engine check information
- 49 - doors etc. information

5. Wipe-wash:

- 50 - windscreen wipers
- 51 - windscreen wash
- 52 - rear screen wiper
- 53 - rear screen wash
- 54-55 - headlamp wipe-wash, headlamp wash

6. Assistance mechanisms:

- 60 - electric front windows
- 61 - electric rear windows
- 62 - central locking
- 63 - electrically controlled seats
- 64 to 6469 - electrically controlled mirrors
- 6470 to 6499 - steering column
- 65 - passive seat belts
- 66 - headlamp height correction
- 67 - gearbox and transmission assistance
- 68 - sun roof, rear quarters

7. Driver aids:

- 70 - brakes
- 71 - variable power steering
- 72 - trip computer, clock
- 73 - cruise control
- 74 - ice warning
- 75 - proximity detection
- 76 - under inflation detection
- 77 - suspension

8. Driving comfort:

- 80 - heating/ventilation, air conditioning
- 81 - heating equipment (heated rear screen, glass and mirrors, glass, lighter)
- 82 - coded anti-start
- 83 - heated seats
- 84 - radio, aerial, radio telephone
- 85 - ice warning
- 86 - anti-theft alarm system
- 87 - electrically controlled blind

#### 4. COMPONENT CODING:

Components have a four figure number e. g.: 4310.

The first two figures indicate the function, the two following figures identify the component.

The numbers for indicator lamps are preceded by the letter V e. g.: V2610.

Special numbering of equipment which supplies an electrical feed:

- BB00: battery
- BB10: battery + ve unit
- CA00: ignition switch
- BF00: fuse box

Free connectors which have a particular function (e. g. testing a function) are numbered as components with the letter C in front e. g.: C1300.

Numbering of earth points:

- the letter M is used followed by an identifying number
- examples: M2A, M90C

Splice numbering:

- the letter E is used followed by an identifying number
- examples: E028, E002
- application of an alphabetical index if the splices are identical, e. g.: E005A, E005B

#### 5. INTERCONNECTION NUMBERING:

The letters IC are used followed by a 2-digit identifying number.

Application of an alphabetical index if the interconnections are identical, e. g.: IC20, IC05A, IC05B.

#### 6. NUMBERING OF BRIDGE BLOCK CONNECTORS:

The letter B is used, followed by a 3 figure number, e. g.: B001.

Application of an alphabetical index if terminals are identical e. g.: B003A, B003B.

#### 7. WIRE CODING:

This code enables linking of the wire number to the type of supply or the electrical function.

Supply is broken down as follows.

Supply before a fuse:

- BB: battery + ve supply
- AA: accessory + ve supply
- CC: ignition controlled + ve supply
- W: side lamp + ve supply
- KK: + ve supply after ignition switched off

*Example:* BB2 (type of supply + wire identification number).

Supply after a fuse:

- B: battery + ve supply
- A: accessory+ ve supply
- C: ignition controlled+ ve supply
- V: side lamp+ ve supply
- K:+ ve supply after ignition switched off

*Example:* B02A (type of supply+ fuse number+ wire identification number, figure or letter).

Specific supplies:

- M: earth
- D: screening

*Example:* M262 (type of supply+ wire identification number, figure or letter).

Comments: each vehicle has special features in the coding of the wires concerning the supplies  
(they are handled as variants).

Other connections between components:

- the figures on the left repeat the number of the function concerned (see: coding of functions)
- the figures on the right represent the identification number in the function

*Example:* 2604 (function number+ wire identification number).

## 8. ABBREVIATIONS:

These abbreviations are quoted on the terminals of certain components (e. g ignition switch).

+ BB: battery + ve.

+ AA: accessory + ve.

+ CC: ignition controlled + ve.

+ KK: + ve after ignition off.

## 9. COLOR CODES:

BA: white    OR: orange

BE: blue    RG: red

BG: beige    RS: pink


GR: gray    VE: green

JN: yellow    VI: mauve

MR: brown    VJ: green/yellow


NR: black

## 10. READING THE SCHEMATIC DIAGRAMS:

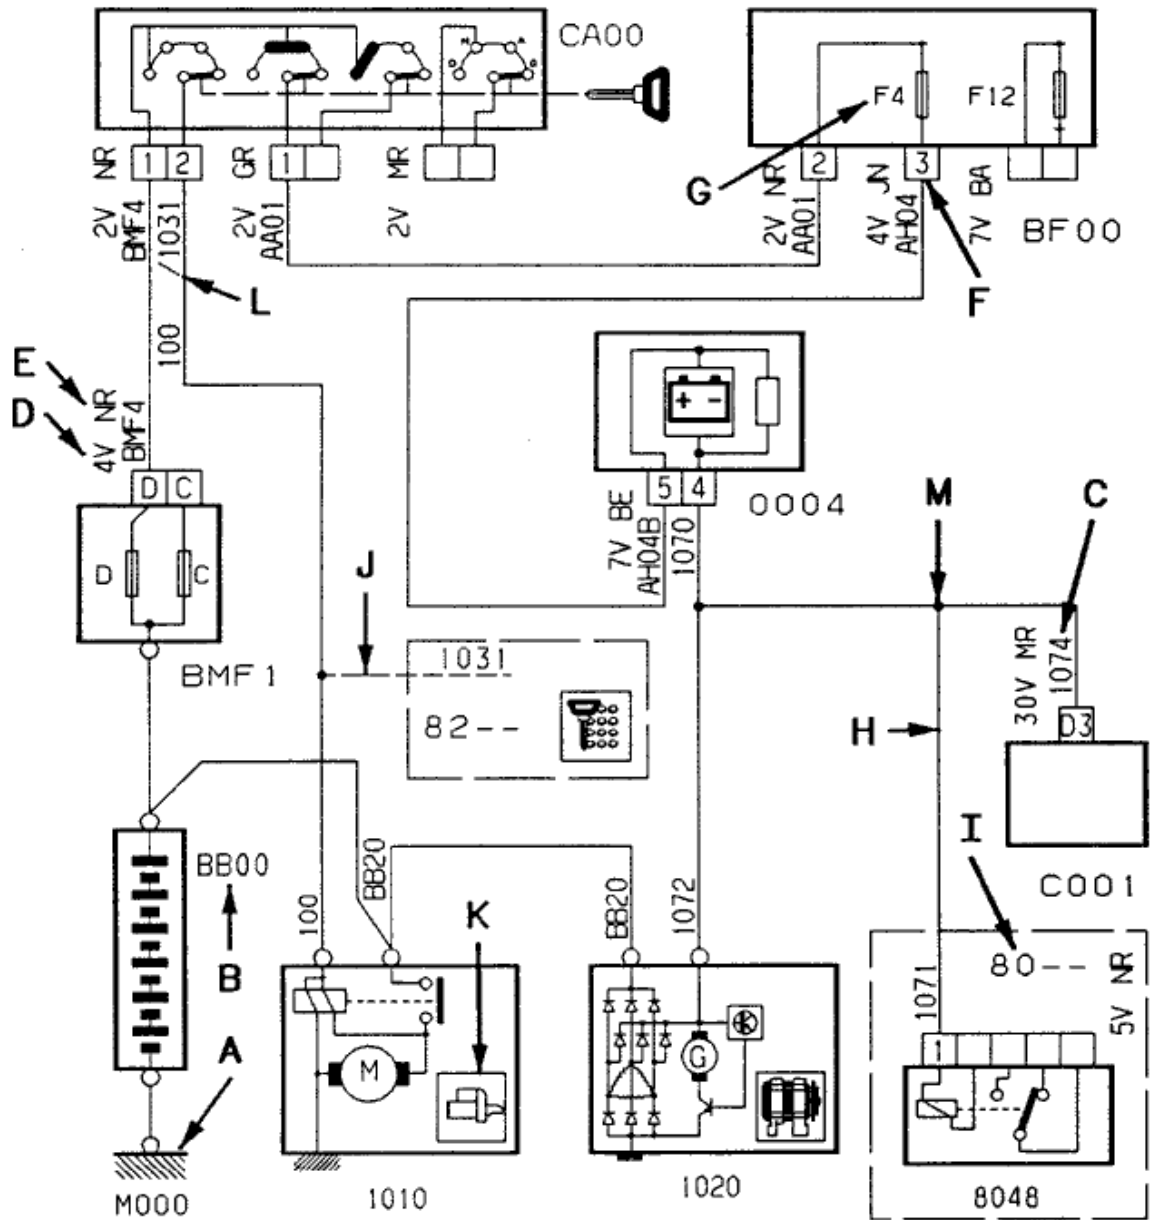


- A: representation of an earth point.
- B: component number.
- C: wire number.
- D: connector socket number.
- E: connector color.
- F: connector socket number.
- G: fuse number.
- H: representation of information going to another function.
- I: number of the function involved.
- J: representation of a wire depending on vehicle specification.
- K: component diagram.
- L: uniting wires.
- M: representation of a splice.

## 11. READING WIRING DIAGRAMS:

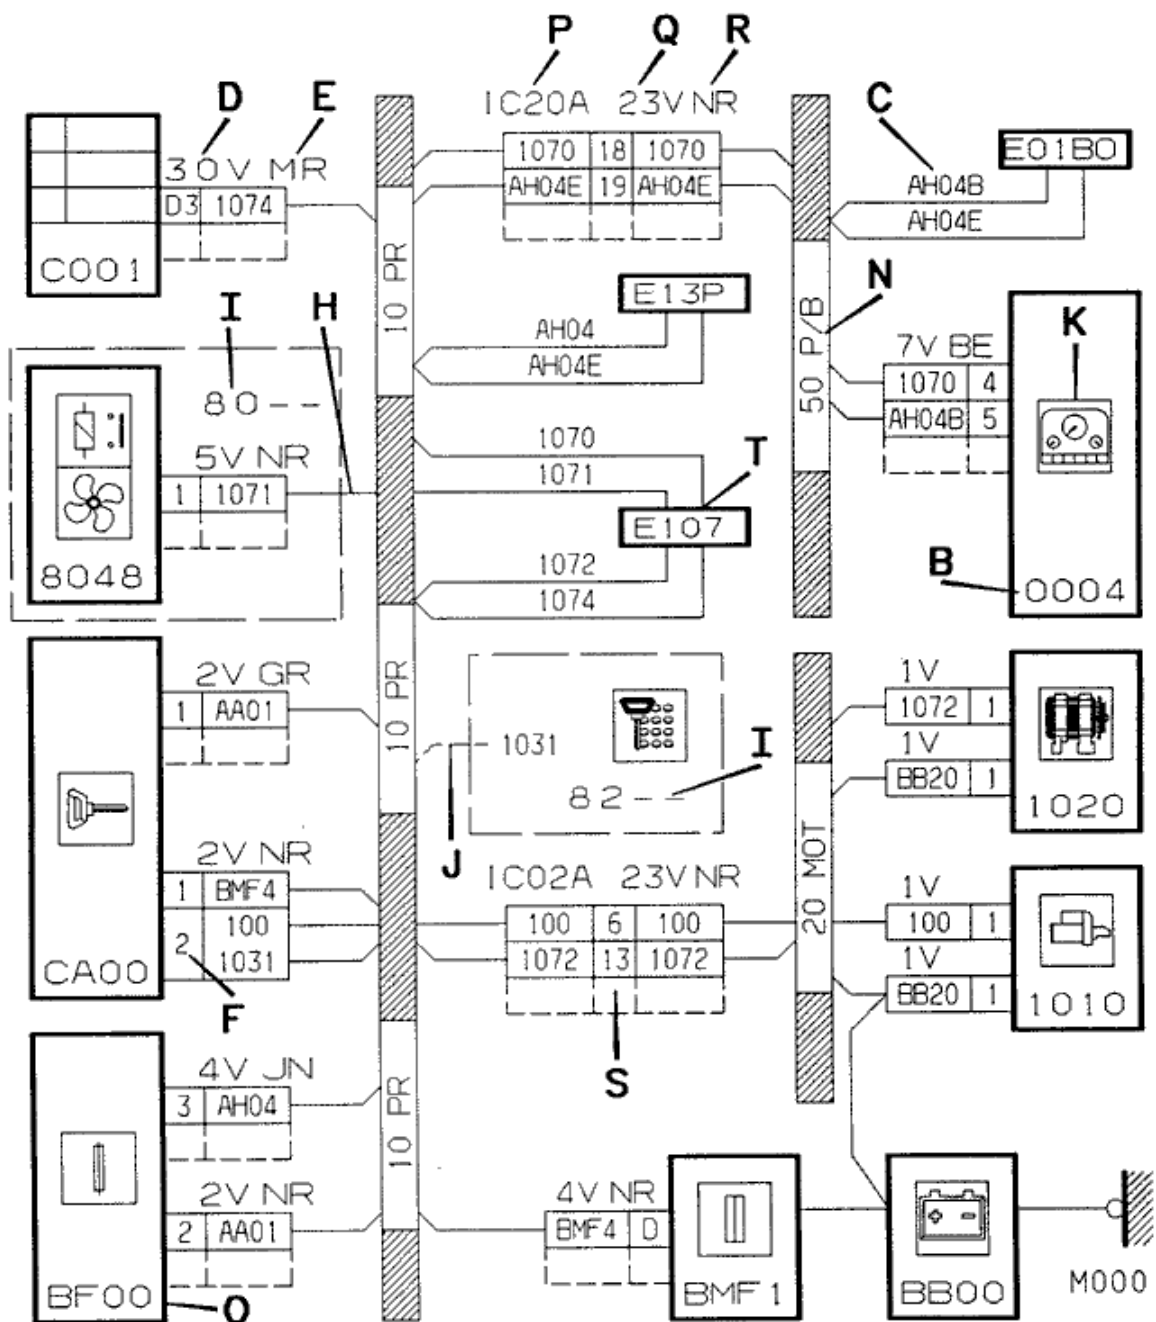

## 12. READING INSTALLATION DIAGRAMS

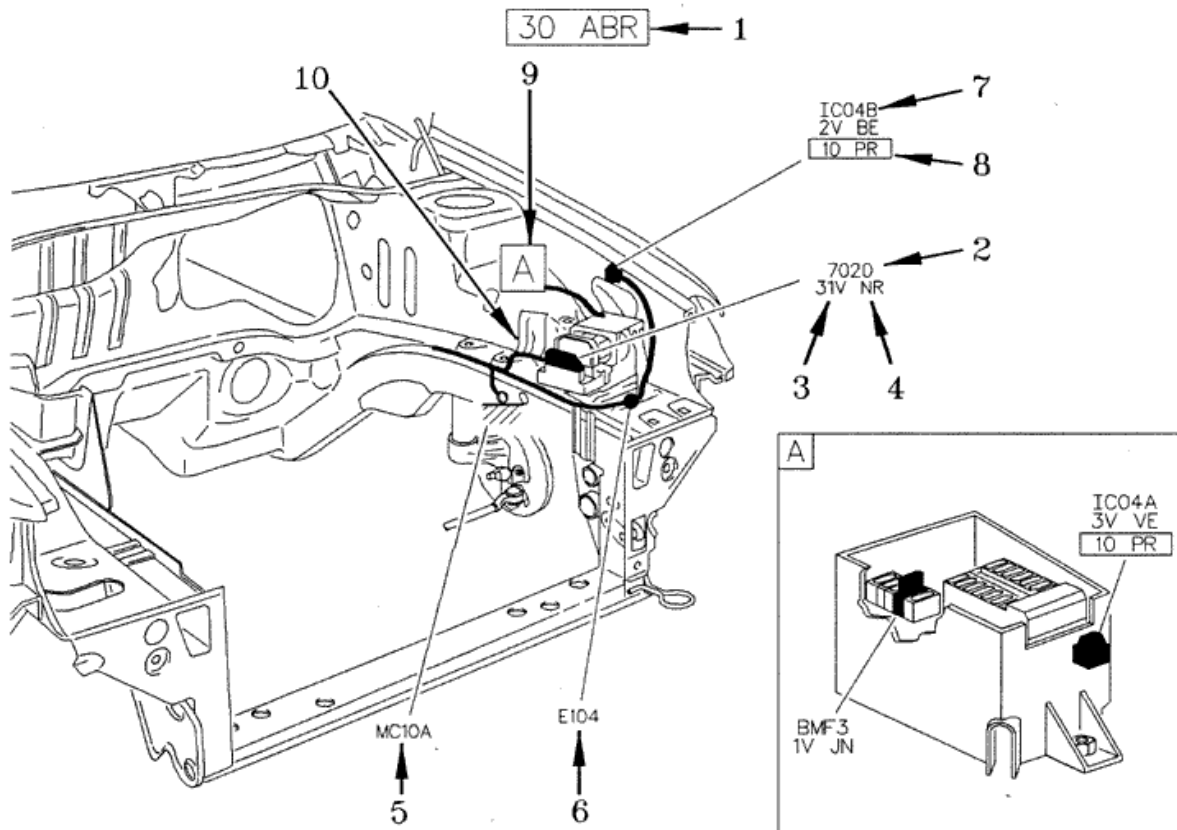

1. Identifying the harness shown.
2. Identifying the equipment.
3. Number of connector ways.
4. Connector color.
5. Representation of an earth point.
6. Representation of a splice.
7. Identifying an interconnection.
8. Identifying the harness connected.
9. For details see the box indicated.
10. Location of the harness label.

## LIST OF COMPONENTS (SECTION 1)

- B001: mixed bridge block 1
- B002: mixed bridge block 2
- B003: mixed bridge block 3
- BB00: battery
- BB01: battery assembly (rear)
- BB02: battery assembly (lower front)
- BB03: battery assembly (upper front)
- BB04: battery central assembly unit
- BB05: starter battery
- BB06: battery
- BB10: battery + ve control unit
- BCP3: 3 relay protection switch unit
- BF00: passenger compartment fuse box
- BF01: fuse box under bonnet
- BF02: fuse box (luggage compartment)
- BGP0: centralized control unit (police)
- BH12: 12 fuse box (passenger compartment)
- BH28: 28 fuse box (passenger compartment)
- BMF1: maxi fuse unit
- BMF2: maxi fuse unit
- BMF3: maxi fuse unit
- BMF4: maxi fuse unit
- BM27: engine fuse board with 27 fuse (s)
- BM34: engine fuse board with 34 fuse (s)
- BSI1: built-in systems interface
- C001: diagnostic connector
- C002: breakdown wire connector
- C004: instrument panel diagnostic connector
- C1030: test connector -engine running information
- C1042: general circuit breaker optional connector
- C1100: ignition test connector
- C1105: ignition suppression connector
- C1110: ignition adjustment connector for idle
- C1200: injection test connector
- C1250: emission control adjustment connector
- C1260: supply pump fuse holder connector
- C1265: carburetor heating resistor fuse-holder connector
- C1270: EGR test connector
- C1300: injection-ignition test connector
- C1310: ignition/injection fuse holder connector
- C1360: oxygen sensor heater fuse holder connector
- C1400: TDC connector
- C1450: system development connector
- C1500: fan operation test connector
- C1630: test connector (automatic gearbox)
- C1700: electronic management test connector
- C1800: LPG diagnostic connector
- C200: caravan socket connector
- C2310: driving school dual control connector
- C2600: front fog-lamp fuse holder connector
- C310: caravan lighting battery positive supply connector
- C4640: fuse-holder connector for supply to chronograph
- C6235: door locking test connector
- C6301: test connector (storing in memory - seat)



- C6540: pre-tensioning seat belts test connector
- C6560: air bag test connector
- C6570: air bag test connector + pre-tensioner
- C6640: ride height circuit bleeding connector
- C6860: electric hood test connector
- C7000: anti-lock brake test connector
- C7001: ABS power fuse holder connector
- C7050: traction control test connector
- C7100: variable power steering test connector
- C7215: multifunction screen diagnostic connector
- C7710: suspension test connector
- C8000: heater test connector
- C8201: immobilizer test connector
- C8400: radio battery + ve connector
- C8600: alarm test connector
- C861: alarm supply connector
- C8630: protection unit diagnostic connector
- CA00: ignition switch
- CCS1: signaling central control assembly (police)
- CP00: rear 12 V socket
- CPC0: sliding door contact assembly (left)
- CPC1: sliding door contact assembly (right)
- CP01: front 12 V socket
- CT00: steering wheel rotary connector
- CV00: switch unit under steering wheel (COM 2000)
- DRAG: shielded earth
- DRA1: shielded earth 1
- ECV0: control assembly on steering wheel
- MF00: starter battery maxi-fuse
- MF01: alternator maxi fuse
- MF175: MEGA-engine compartment fuse 175 A
- PS00: connector board
- PSF0: connection board - fuse box (passenger compartment)
- PSF1: connection board - fuse box (under the bonnet)
- PSF2: connection board - fuse box (luggage compartment)
- V0004: stop warning lamp
- V1000: load warning lamp
- V1001: traction batteries correct charge lamp
- V1002: traction batteries discharged warning lamp
- V1017: 12 V converter fault warning lamp
- V1100: ignition test warning lamp
- V1150: pre-heat warning lamp
- V1200: injection test warning lamp
- V1203: pump cut-off light
- V1300: engine diagnosis warning lamp
- V1700: temporary fault warning lamp
- V1701: forward drive warning lamp
- V1702: reverse drive warning lamp
- V1703: insulation fault warning lamp
- V1800: gas supply warning lamp
- V2000: rear fog lamp warning lamp
- V2010: front fog lamp warning light
- V2300: hazard warning lamp
- V2310: right or left flasher indicator lamp
- V2320: LH direction indicator warning lamp

- V2330: RH direction indicator warning lamp
- V2600: sidelamp warning lamp
- V2610: dipped beam warning lamp
- V2620: main beam warning lamp
- V2660: front fog lamp warning lamp
- V4010: coolant low level warning lamp
- V4017: battery electrolyte level warning lamp
- V4020: engine coolant maximum temperature warning lamp
- V4040: screen wash fluid low level warning lamp
- V4050: water in diesel fuel warning lamp
- V4110: engine oil low pressure warning lamp
- V4120: engine oil low level warning lamp
- V4130: maximum engine oil temperature warning light
- V4200: choke warning lamp
- V4205: air cleaner blocked warning light
- V4300: low fuel level warning lamp
- V4320: tank cap open warning lamp
- V4400: parking brake warning lamp
- V4410: brake fluid low level warning lamp
- V4420: handbrake/low brake fluid level warning lamp
- V4430: brake pad wear warning lamp
- V4440: blown bulb warning lamp
- V4600: gear lever position warning lamp
- V4610: gearbox oil temperature warning lamp
- V4700: door open warning lamp
- V4730: seat belt not buckled warning lamp
- V4800: catalytic converter overheating warning lamp
- V6235: deadlocking pilot light
- V6560: air bag warning light (front)
- V6561: side air bag warning lamp
- V6640: ride height correction fluid low level warning lamp
- V6700: differential lock test warning lamp
- V6709: reduction gear change warning lamp
- V7000: ABS diagnostic warning lamp
- V7001: ABS operational indicator light
- V7050: traction control diagnostic warning lamp
- V7060: traction control operation lamp
- V7310: cruise control indicator lamp
- V7700: suspension diagnostic warning lamp
- V7800: stability check diagnostic warning light
- V8018: additional heating low fuel level warning lamp
- V8110: heated rear screen indicator lamp
- V8220: transponder warning lamp
- 1000: starting safety switch
- 1005: starter inhibitor relay
- 1010: starter
- 1020: alternator
- 1025: dual battery unit
- 1030: engine running signal relay
- 1040: general maintenance relay
- 1041: emergency stop switch
- 1042: general relay
- 1043: re-setting push button
- 1044: diode unit
- 1045: auxiliary re-arming push button

- 1086: alarm starter cut-off relay
- 1100: distributor
- 1101: engine coolant thermistor for advance module
- 1102: advance module
- 1104: advance correction solenoid
- 1105: ignition amplifier module
- 1110: ignition distributor
- 1115: cylinder reference sensor
- 1116: cylinder reference sensor 1
- 1117: cylinder reference sensor 2
- 1120: knock sensor
- 1121: knock sensor 1
- 1122: knock sensor 2
- 1125: accelerator pedal switch
- 1127: ignition supply relay
- 1130: ignition control unit
- 1131: cylinder 1 ignition coil
- 1132: cylinder 2 ignition coil
- 1133: cylinder 3 ignition coil
- 1134: cylinder 4 ignition coil
- 1135: ignition coil
- 1136: ignition coil capacitor
- 1137: cylinder 5 ignition coil
- 1138: cylinder 6 ignition coil
- 1140: emission control module for carburetor
- 1141: coolant heating plugs supply relay 1
- 1142: coolant heating plugs supply relay 2
- 1143: coolant heating plugs supply relay 3
- 1145: throttle opening solenoid valve
- 1146: coolant heating plugs supply relay 1-2
- 1147: coolant heating plugs supply relay 3-4
- 1148: coolant heater relay 1
- 1149: coolant heater relay 2
- 1150: pre-heat control unit
- 1155: pre-heat relay
- 1156: post-heat relay
- 1157: post-heat thermal switch
- 1158: pre-post heating control unit
- 1160: glow plugs
- 1161: no 1 cylinder glow plug
- 1162: no 2 cylinder glow plug
- 1163: no 3 cylinder glow plug
- 1164: no 4 cylinder glow plug
- 1190: water circuit heater
- 1200: fuel pump relay
- 1201: injection pump relay
- 1202: tachymetric relay
- 1203: inertia switch
- 1204: impact safety relay
- 1205: fuel pump fuse
- 1206: decanting pump control unit
- 1207: decanting pump
- 1208: diesel injection pump (advance corrector, fuel cut-off solenoid)
- 1209: scavenge pump
- 1210: fuel pump

- 1211: fuel gauge pump
- 1212: air tank solenoid
- 1213: air pump relay
- 1214: econoscope
- 1215: purge canister solenoid valve
- 1216: canister simulation resistor
- 1217: canister bleed cut-off solenoid
- 1218: ignition advance cut-off solenoid
- 1219: throttle potentiometer (injection, automatic transmission)
- 1220: coolant temperature sensor
- 1221: diesel thermistor 1222: accelerometer
- 1223: injection air solenoid valve
- 1224: absorber closing solenoid valve
- 1225: idle regulation stepper motor (MMBA)
- 1226: idle regulation motor and idle switch
- 1227: fuel tank pressure sensor
- 1228: idle regulation motor and idle switch + Hall effect sensor
- 1229: turbo regulator solenoid with variable resistance
- 1230: supplementary air device
- 1231: automatic transmission idling speed solenoid unit
- 1232: idle maintaining solenoid valve
- 1233: turbocharger pressure regulation solenoid valve
- 1234: carburettor damper solenoid valve
- 1235: carburettor breather solenoid valve
- 1236: overrun cut-off solenoid valve
- 1237: pulsair solenoid valve
- 1238: 2 volume VASC solenoid
- 1239: idling regulation solenoid valve
- 1240: induction air temperature sensor
- 1241: pulsair pump
- 1242: pulsair relay
- 1243: variable solenoid valve 1
- 1244: EGR proportional solenoid valve
- 1245: altitude switch
- 1246: EGR function supply relay
- 1247: EGR coolant thermal switch
- 1248: EGR calibration resistor
- 1249: load lever potentiometer (EGR)
- 1250: EGR exhaust gas recycling control unit
- 1251: EGR vacuum pump
- 1252: diesel advance corrector relay
- 1253: all or nothing solenoid valve (EGR)
- 1254: EGR load lever switch
- 1255: fuel cut-off solenoid valve
- 1256: advance solenoid valve (diesel)
- 1257: - flow solenoid (diesel)
- 1258: + flow solenoid (diesel)
- 1259: +/- flow solenoid (diesel)
- 1260: injector needle lift sensor
- 1261: accelerator pedal position sensor
- 1262: motorized butterfly
- 1263: EGR + butterfly solenoid valve
- 1264: swirl solenoid valve
- 1265: carburetor heater thermal switch
- 1266: carburetor heater relay

- 1267: diesel butterfly solenoid valve (air intake)
- 1268: variable solenoid valve 2
- 1269: carburetor heating resistor relay
- 1270: carburetor or throttle housing heater resistor
- 1271: cut-off solenoid valve
- 1272: cut-off solenoid assembly, carburetor heater resistor
- 1273: oil breather re-heat resistor 1
- 1274: oil breather re-heat resistor 2
- 1275: carburetor
- 1276: diesel heater
- 1277: diesel high pressure pump piston deactivation solenoid 3
- 1278: start of compression sensor
- 1280 : long 2 volume VASC solenoid
- 1281: short 2 volume VASC solenoid
- 1301: automatic transmission information relay (injection)
- 1302: injection and supply relay
- 1303: injection and ignition supply relay
- 1304: engine management multi-function double relay
- 1305: mixture potentiometer
- 1306: automatic gearbox relay shunt
- 1307: power multifunction double relay
- 1308: engine oil pressure sensor
- 1309: turbocharger air thermistor
- 1310: air flow sensor
- 1311: turbo pressure sensor
- 1312: induction air pressure sensor
- 1313: engine speed sensor
- 1314: altitude sensor
- 1315: injection resistor
- 1316: throttle position sensor
- 1317: diesel pump lever position sensor
- 1318: throttle switch unit
- 1319: injection coding resistor
- 1320: engine management control unit
- 1321: diesel high pressure sensor
- 1322: diesel high pressure regulator
- 1323: high temperature sensor (exhaust gas)
- 1324: proportional dosing solenoid valve
- 1325: petrol high pressure sensor
- 1326: injection unit supply fuse
- 1327: cam position sensor (diesel pump)
- 1328: rotor position sensor (diesel pump)
- 1329: slide position sensor (DIESEL pump)
- 1330: injector
- 1331: injector cylinder no1
- 1332: injector cylinder no2
- 1333: injector cylinder no3
- 1334: injector cylinder no4
- 1335: injector cylinder no5
- 1336: injector cylinder no6
- 1337: injector cylinder no7
- 1338: injector cylinder no8
- 1339: injector cylinder no9
- 1340: injector cylinder no10
- 1342: motor multi-function control unit

- 1345: oxygen sensor heater relay
- 1348: oxygen sensor heater fuse
- 1350: oxygen sensor (front)
- 1351: oxygen sensor (rear)
- 1352: front downstream oxygen sensor
- 1353: front upstream oxygen sensor
- 1354: rear downstream oxygen sensor
- 1355: rear upstream oxygen sensor
- 1400: TDC sensor 1500: fan relay
- 1501: cooling fan fuse
- 1502: left hand fan supply relay
- 1503: right hand fan supply relay
- 1504: left and right hand fan series supply relay
- 1505: cooling fan thermal switch
- 1506: two-speed cooling fan resistor
- 1507: fan control (coolant) temperature sender unit via ECU
- 1508: low speed fan supply relay
- 1509: high speed fan supply relay
- 1510: fan
- 1511: right-hand fan
- 1512: left-hand fan
- 1513: cooling fan electronic chopper
- 1515: left-hand interference suppression filter
- 1516: right-hand interference suppression filter
- 1517: cooling fan controlled flap
- 1518: cooling fan three speed resistor
- 1520: engine post-cooling thermal switch
- 1525: engine post-cooling relay
- 1526: engine post-cooling time switch
- 1530: post-cooling device shunt
- 1550: turbo coolant pump
- 1551: turbo coolant pump fuse
- 1555: turbo coolant pump control relay
- 1600: selector lever position switch
- 1601: one-touch control lever sensor
- 1602: one-touch control switch
- 1606: parking position buzzer supply relay
- 1607: auto transmission selector and display lamp supply relay
- 1613: auto transmission engine speed sensor
- 1615: pressure sensor (automatic gearbox)
- 1620: vehicle speed sensor
- 1621: vehicle speed sensor (automatic gearbox)
- 1622: automatic gearbox output speed sensor
- 1625: vehicle speed interface module
- 1630: automatic transmission control unit
- 1631: torque reduction solenoid valve
- 1632: pedal position contact
- 1635: automatic gearbox electro hydraulic block
- 1636: auto transmission position sensor
- 1637: automatic gearbox kickdown switch
- 1638: auto transmission lever blocking actuator
- 1639: accelerator pedal foot off contact
- 1640: automatic transmission programme selector
- 1642: gear lever blocking actuator control relay
- 1643: key blocking actuator control relay

- 1644: key blocking actuator
- 1645: automatic gearbox electronic piloting
- 1646: automatic gearbox solenoid valve block
- 1700: electric management control unit
- 1701: temperature monitoring module -lower front battery voltage
- 1702: temperature monitoring module -upper front battery voltage
- 1703: temperature monitoring module -rear battery voltage
- 1704: relay housing
- 1705: electronic tool kit
- 1713: accelerator potentiometer
- 1714: energy gauge
- 1718: electric motor cooling fan control thermistor
- 1722: battery electrolyte cooling fan control thermistor
- 1724: additional heating switch
- 1725: additional heating
- 1726: additional heating fuel pump
- 1727: traction battery coolant pump
- 1728: electronic management control unit coolant pump
- 1729: electric vehicle coded anti-start relay
- 1730: coded anti-theft shunt
- 1732: battery heating relay
- 1733: battery heating resistor
- 1740: electric traction motor
- 1746: electric motor cooling fan
- 1747: charging socket
- 1748: battery charging socket unit
- 1800: gas control unit
- 1801: absolute pressure sensor
- 1802: dosing solenoid valve
- 1803: tank solenoid valve
- 1804: vapour pressure relief solenoid valve
- 1805: 3 relay housing
- 1806: oxygen sensor relay
- 1807: diode bridge
- 1808: gas supply unit
- 1809: linear actuator
- 1810: Petrol-Gas switch
- 1811: petrol/gas timer relay
- 1812: gas supply fuse unit
- 1813: diagnostic warning light cut-off relay
- 1814: gas pressure gauge
- 1815: LPG/petrol dialogue double relay
- 1816: 12V/5V voltage adaptor fitting
- 1817: LPG gauge
- 1818: coolant thermistor (15°)
- 1819: LPG gauge damping unit
- 1820: gas distribution motor
- 1821: LPG solenoid valve + gauge
- 1822: adaption fitting diode 12V/5V
- 1823: adaption fitting resistor 12V/5V
- 1824: inlet air flap solenoid valve
- 1825: gas supply solenoid valve
- 1826: fuel pump cut-off relay
- 0002: lighting and signaling switch
- 2000: rear fog lamp switch

- 2001: lighting/wiping stalk
- 2002: driving school buzzer (Germany)
- 2003: driving school instructor's control unit
- 2004: driving school jack socket (Germany)
- 2005: rear fog lamp relay
- 2006: driving school switch (Germany)
- 2007: driving school footwell lighting (Germany)
- 2010: rear fog lamps (left side)
- 2011: rear fog lamps (centre)
- 2015: rear fog lamps (right side)
- 2016: rear fog lights control unit
- 2100: stop lamp switch
- 2101: redundant brake switch
- 2110: additional stop lamps
- 2111: additional stop lamps (left side)
- 2112: additional stop lamps (right side)
- 2200: reverse lamp switch
- 2202: reverse drive control switch
- 2210: left-hand reverse lamp switch
- 2215: right-hand reverse lamp switch

#### LIST OF COMPONENTS (SECTION 2)

- 2300: hazard warning switch
- 2305: flasher unit
- 2310: direction indicator switch
- 2320: left-hand front direction indicator lamp
- 2325: right-hand front direction indicator lamp
- 2330: left-hand rear direction indicator lamp (if separated)
- 2335: right-hand rear direction indicator lamp (if separated)
- 2340: left-hand side repeater flasher
- 2345: right-hand side repeater flasher
- 2400: sidelamp day running lights line relay
- 2401: dipped beam day running lights relay
- 2402: daylight running lights relay shunt
- 2410: dipped beam relay
- 2411: dim-dip relay
- 2415: dim-dip resistor
- 2500: horn button
- 2501: horn button in steering wheel
- 2505: air horn compressor relay
- 2510: air horn compressor
- 2520: horns
- 2521: low note horn
- 2522: high note horn
- 2523: pedestrian buzzer
- 2525: air horn fuse
- 2530: siren unit (police)
- 2531: police siren switch
- 2532: day/night police siren switch
- 2535: siren speaker (police)
- 2600: lamp rotator
- 2605: dipped beam relay
- 2606: main beam relay
- 2610: left-hand headlamp
- 2615: right-hand headlamp



- 2620: front left side light
- 2625: front right side light
- 2630: left-hand tail lamp
- 2631: right-hand tail lamp on boot lid
- 2632: left-hand tail lamp on boot lid
- 2633: number plate right-hand lamp
- 2634: jack socket shunt
- 2635: right-hand tail lamp
- 2636: number plate lamp
- 2637: jack plug for rotating lamp
- 2638: rotating lamp
- 2639: rotating lamp switch
- 2640: left-hand front door marker lamp
- 2641: front right side marker
- 2642: front left side marker
- 2643: rear right side marker
- 2644: rear left side marker
- 2645: right-hand front door marker lamp
- 2650: left-hand rear door marker lamp
- 2651: police car bar across roof
- 2655: right-hand rear door marker lamp
- 2656: rear facing flashing stop lights
- 2657: rear facing flashing stop lights central unit (roof tail lamps)
- 2658: rear roof lamp switch
- 2659: orange lights switch
- 2660: front fog lamp switch
- 2662: front fog lamp inhibitor relay (front)
- 2665: front fog lamp relay
- 2670: left-hand front fog lamp
- 2675: right-hand front fog lamp
- 2680: long range driving lamp switch
- 2685: long range driving lamp relay
- 2690: left hand long range driving lamp
- 2695: right hand long range driving lamp
- 3000: left hand front door flange switch
- 3001: right hand front door flange switch
- 3002: door aperture switch-rear left-hand door
- 3003: door aperture switch-rear right-hand door
- 3004: lighting timer unit
- 3005: courtesy lamp timer relay
- 3006: courtesy lamp switch
- 3010: front courtesy lamp
- 3012: courtesy lamp (front LH)
- 3013: courtesy lamp (front RH)
- 3015: roof console + integral functions
- 3019: rear courtesy lamp switch
- 3020: rear courtesy lamp
- 3022: rear left-hand courtesy lamp
- 3023: rear right hand courtesy lamp
- 3024: left-hand courtesy lamp
- 3025: right-hand courtesy lamp
- 3029: centre courtesy lamp switch
- 3030: central courtesy lamp
- 3031: front right-hand reading lamp
- 3032: front left-hand reading lamp

- 3033: rear right-hand reading lamp
- 3034: rear left-hand reading lamp
- 3035: footwell illumination
- 3036: right hand footwell light
- 3037: left hand footwell light
- 3040: left-hand front door tread lamp
- 3042: left-hand rear door tread lamp
- 3045: right-hand front door tread lamp
- 3047: right-hand rear door tread lamp
- 3050: lighting rheostat
- 3051: heater control panel lamp
- 3052: console lamp
- 3053: cigar lighter lamp
- 3054: ashtray lamp
- 3055: radio cover control lamp
- 3056: ashtray cover control lamp
- 3057: left-hand vent lighting
- 3058: right-hand vent lighting
- 3059: centre vent lighting
- 3060: vanity mirror lamp (on the driver's side)
- 3061: vanity mirror lamp (passenger's side)
- 3062: rear ashtray lighting
- 3065: map reading lamp
- 3070: selector lever lamp
- 3075: ignition switch lamp
- 3080: police visor lamp
- 3085: central passenger courtesy light switch (white light)
- 3086: central passenger courtesy light switch (blue light)
- 3087: parking lamps switch
- 3088: parking lamps relay
- 3100: luggage compartment switch
- 3105: boot (or luggage compartment) lamp
- 3106: luggage compartment left-hand lighting
- 3107: luggage compartment right-hand lighting
- 3110: glove box lamp switch
- 3115: glove box lamp
- 3120: bonnet switch
- 3121: engine compartment lamp
- 3122: engine compartment lamp switch
- 3125: luggage compartment lamp relay
- 3126: luggage compartment light timer relay
- 0004: instrument panel
- 4000: instrument panel centralized electronic module
- 4005: coolant temperature sensor
- 4010: engine coolant level switch
- 4015: engine coolant level unit
- 4020: engine coolant thermal switch
- 4025: temperature sensor - engine coolant thermal switch (gauge)
- 4026: coolant temperature gauge
- 4030: coolant thermistor (gauge)
- 4035: pre-warning heat switch
- 4040: coolant and air conditioning thermistor
- 4050: water in fuel sensor
- 4060: battery charge indicator
- 4100: temperature gauge + engine oil level

- 4101: engine oil temperature display
- 4102: engine oil level gauge
- 4103: temperature sensor (engine oil)
- 4104: engine oil pressure sensor
- 4105: engine oil pressure gauge
- 4106: pressure sensor/oil pressure switch
- 4110: oil pressure switch
- 4111: temperature sensor + engine oil thermal switch
- 4120: engine oil level sensor
- 4130: engine oil thermal switch
- 4200: choke switch
- 4205: air cleaner pressure switch
- 4210: tachometer (if separated)
- 4240: induction pressure sensor
- 4241: turbocharge pressure gauge
- 4300: low fuel level switch
- 4310: fuel gauge
- 4311: fuel pump electronic damping unit
- 4315: fuel gauge (transmitter)
- 4320: tank cap present switch
- 4330: fuel flow meter (trip computer)
- 4335: fuel consumption interface unit
- 4340: fuel consumption
- 4341: current fuel consumption indicator
- 4400: handbrake switch
- 4401: parking brake warning lamp diode
- 4402: reverse gear buzzer diode
- 4405: vacuum pressure switch control of the brake servo vacuum
- 4410: brake fluid level switch
- 4420: ABS warning lamp relay
- 4430: front left brake pad wear contact
- 4431: front right brake pad wear contact
- 4432: rear left brake pad wear contact
- 4433: rear right brake pad wear contact
- 4440: bulb failure detection control unit
- 4445: blown bulb relay (warning lamp)
- 4450: brake warning lamp relay (Australia)
- 4500: ride height correction fluid level switch
- 4605: selection or programme display
- 4610: gearbox oil thermal switch
- 4630: speedometer
- 4635: tachograph electronic converter
- 4700: left-hand front door lock switch (door open detection) (if different 3000)
- 4701: right-hand front door lock switch (door open detection) (if different 3001)
- 4702: left-hand rear door lock switch (door open detection) (if different 3002)
- 4703: right-hand rear door lock switch (door open detection) (if different 3003)
- 4704: bonnet closed switch (bonnet open detection)
- 4705: boot lock switch (boot open detection)
- 4710: headlamp flash relay
- 4715: door open buzzer
- 4716: parking brake position reminder buzzer
- 4720: lamps on buzzer relay
- 4725: lamps on + ignition key in buzzer relay
- 4730: seat belt switch
- 4735: seat belt buzzer relay

- 4740: overspeeding buzzer
- 4750: anti-lock braking buzzer relay
- 4760: ignition key in lock switch (buzzer control)
- 4765: ignition key in lock buzzer relay
- 4790: electric motor reminder buzzer
- 4800: catalytic converter temperature sensor
- 4805: catalytic converter temperature control unit
- 4900: door open indicator display
- 4905: points matrix
- 4990: charging flap open check contact
- 0005: screen wiper switch
- 5000: windscreen wipe/wash switch (if separated)
- 5001: rain sensor
- 5002: rain sensor control relay
- 5003: rain sensor speed control relay
- 5004: automatic windscreen wiper control unit
- 5005: windscreen wiper relay
- 5006: front/rear wiper relay
- 5010: windscreen wiper timer
- 5015: windscreen wiper motor
- 5016: parking stop unit
- 5020: wash fluid heater
- 5021: pipe heater
- 5100: windscreen wash pump
- 5105: heated windscreen wash jets
- 5110: wash liquid level sensor
- 5115: front/rear screen wash pump
- 5200: tailgate wipe/wash control (if separated)
- 5202: rear screen wiper switch
- 5203: rear screen wash switch
- 5204: rear wiper motor contact (if separated)
- 5205: tailgate wiper relay
- 5210: rear screen wiper timer
- 5211: left hand rear screen wiper motor
- 5212: right hand rear screen wiper motor
- 5215: rear screen wiper motor
- 5300: rear screen wash pump
- 5400: headlamp wash timer relay
- 5401: headlamp wash relay
- 5405: headlamp wash pump
- 5406: headlamp wash switch
- 6000: left-hand door left-hand window lift switch
- 6001: left-hand window lift front switch
- 6002: right-hand window lift front switch
- 6005: right-hand door right-hand window lift switch
- 6010: right-hand door left-hand window lift switch
- 6015: left-hand door right-hand window lift switch
- 6016: window lift circuit diode + sun roof
- 6020: front window lift + sun roof relay
- 6021: window lift relay
- 6025: window lift + sun roof supply re-connection relay
- 6029: driver's door one-touch/ safety auto-reverse ECU
- 6030: one touch electric window control unit
- 6031: passenger's one touch front electric window motor + control unit
- 6032: driver's one touch front electric window motor + control unit

- 6033: safety auto-reverse control unit
- 6034: safety auto-reverse sensor
- 6035: safety auto-reverse window motor (driver's door)
- 6036: window lift control board/ rear-view mirror (driver's door)
- 6037: window lift control board/ rear-view mirror (passenger door)
- 6038: safety auto-reverse window motor (passenger door)
- 6040: window lift motor (front LH)
- 6041: interior handle sensor (driver's door)
- 6042: exterior handle sensor (driver's door)
- 6043: interior handle sensor (passenger door)
- 6044: exterior handle sensor (passenger door)
- 6045: window lift motor (front RH)
- 6100: left-hand rear window lift rear switch
- 6101: right rear window lift unit + motor (one-touch)
- 6102: left rear window lift unit + motor (one-touch)
- 6105: right-hand rear window lift rear switch
- 6110: left-hand rear window lift front switch
- 6115: right-hand rear window lift front switch
- 6116: rear electric window control panel
- 6120: rear window lift inhibitor switch
- 6121: rear function locking relay
- 6122: rear window lift inhibitor switch + alarm cut-off
- 6125: rear window lift relay
- 6126: rear window lift relay on + aa
- 6130: window lift motor (rear LH)
- 6131: right rear window lift unit + motor
- 6132: left rear window lift unit + motor
- 6133: safety auto-reverse window motor (rear left-hand door)
- 6134: safety auto-reverse window motor (rear right-hand door)
- 6135: window lift motor (rear RH)
- 6140: rear window lift relay 4- heated seat
- 6200: front left-hand door open switch
- 6202: driver's door lock assembly
- 6203: switch insulation diode (front door/rear)
- 6204: rear wiper motor contact (if separated)
- 6205: front right-hand door open switch
- 6207: front passenger door lock assembly
- 6210: rear left-hand door open switch
- 6212: rear left-hand door lock assembly
- 6215: rear right-hand door open switch
- 6216: boot lid open switch
- 6217: rear right-hand door lock assembly
- 6218: right-hand rear hinged door-lock assembly
- 6219: door unlocking safety relay
- 6220: door locking switch
- 6221: right-hand rear hinged door locking switch
- 6222: boot lock assembly
- 6230: infra red door locking receiver
- 6231: high frequency receiver for central locking
- 6235: central locking control unit
- 6237: boot unlocking switch
- 6240: left-hand front door lock motor
- 6242: front left-hand door deadlock motor
- 6245: right-hand front door lock motor
- 6247: front right-hand door deadlock motor

- 6250: left-hand rear door lock motor
- 6252: rear left-hand door deadlock motor
- 6253: left-hand rear hinged door locking motor
- 6255: right-hand rear door lock motor
- 6256: rear door lock motor
- 6257: rear right-hand door deadlock motor
- 6258: right-hand rear hinged door locking motor
- 6259: right-hand rear hinged door deadlocking motor
- 6260: boot or tailgate lock motor
- 6261: tailgate locking motor
- 6262: luggage compartment deadlocking motor diode
- 6265: fuel filler flap lock motor
- 6266: charging flap locking motor
- 6300: driver's seat sliding switch
- 6301: control unit for memorizing seat and mirror positions
- 6302: driver's seat adjustment assembly
- 6303: passenger's seat adjustment assembly
- 6304: seat position memory ECU (passenger)
- 6305: passenger's seat sliding switch
- 6307: keypad for memorizing seat position
- 6308: presence sensor
- 6310: driver's seat raising switch
- 6311: switch : driver's seat front cushion
- 6312: switch : driver's seat rear cushion
- 6315: passenger's seat raising switch
- 6320: driver's seat slide motor
- 6321: slide position sensor (driver's seat)
- 6322: height adjustment motor (driver's seat)
- 6323: height adjustment motor (passenger's seat)
- 6325: passenger's seat slide motor
- 6331: driver's seat height position sensor
- 6332: driver's seat cushion front height motor
- 6333: driver's seat front cushion position sensor
- 6334: driver's seat cushion rear height motor
- 6335: driver's seat rear cushion position sensor
- 6337: passenger's seat cushion front height motor
- 6339: passenger's seat cushion rear height motor
- 6340: driver's seat backrest switch
- 6341: seatback position sensor (driver's seat)
- 6345: passenger's seat backrest switch
- 6346: centre armrest switch
- 6347: centre armrest motor
- 6350: driver's seat backrest inclination motor
- 6355: passenger's seat backrest inclination motor
- 6360: driver's seat adjustment relay
- 6365: passenger's seat adjustment relay
- 6366: slide high speed motor - passenger's seat
- 6367: slide high speed motor - driver's seat
- 6370: adjustment pump + solenoid valve assembly - driver's seat
- 6371: passenger's seat backrest inflation contact
- 6372: driver's seat backrest inflation contact
- 6373: driver's seat front stop position micro switch
- 6374: seat back locked position micro switch -driver's seat
- 6375: adjustment pump + solenoid valve assembly - passenger's seat
- 6376: passenger's seat front stop position micro switch

- 6377: seat back folded position micro switch -passenger's seat
- 6378: seat back locked position micro switch -passenger's seat
- 6379: passenger's seat memorized position micro switch
- 6380: rear seat cushion adjustment switch
- 6381: rear seat adjustment motor
- 6382: seat adjustment switch (rear RH)
- 6383: seat adjustment switch (rear LH)
- 6384: seat adjustment motor (rear RH)
- 6385: seat adjustment motor (rear LH)
- 6386: rear head-rest retracting switch (right side)
- 6387: rear head-rest retracting switch (left side)
- 6388: head-rest motor (rear RH)
- 6389: head-rest motor (rear LH)
- 6390: rear head-rest retracting switch
- 6391: seat adjustment assembly (rear RH)
- 6392: seat adjustment assembly (rear LH)
- 6400: driver's side rear view mirror control
- 6405: passenger's side rear view mirror control
- 6406: rear view mirror control
- 6407: fold back rear view mirror unit
- 6410: driver's side rear view mirror (electric mirror/heated mirror)
- 6415: passenger's side rear view mirror (electric mirror/heated mirror)
- 6420: fold-back mirror switch
- 6421: reverse indexing unit
- 6422: reverse indexing switch
- 6430: electric interior mirror
- 6435: anti-dazzle unit
- 6440: electrochrome interior mirror
- 6470: steering wheel adjustment switch
- 6471: steering wheel height adjustment motor
- 6472: steering wheel depth adjustment motor
- 6500: driver's passive restraint switch
- 6505: passenger's passive restraint switch
- 6510: driver's passive restraint control unit
- 6515: passenger's passive restraint control unit
- 6520: passive restraint time switch relay
- 6530: driver's passive restraint motor
- 6535: passenger's passive restraint motor
- 6540: driver's pre-tensioning seat belt control unit
- 6541: passenger's pre-tensioning seat belt control unit
- 6542: pre-tensioning seat belt control unit
- 6543: passenger presence detector
- 6544: presence detector (rear RH)
- 6545: presence detector (rear LH)
- 6546: presence of passenger detection unit
- 6551: right-hand side air bag screen module
- 6552: left-hand side air bag screen module
- 6553: air bag shunt resistor
- 6554: front top left-hand side air bag module
- 6555: front top right-hand side air bag module
- 6556: rear bottom left-hand side air bag module
- 6557: rear bottom right-hand side air bag module
- 6558: rear top right-hand side air bag module
- 6559: rear top left-hand side air bag module
- 6560: airbag ECU

- 6561: air bag control unit auto interference suppression
- 6562: front bottom right-hand side air bag module
- 6563: front bottom left-hand side air bag module
- 6564: passenger's air bag module
- 6565: driver's air bag module
- 6566: airbag light relay
- 6567: right-hand impact detector
- 6568: left-hand impact detector
- 6569: passenger air bag neutralization switch
- 6570: air bag and pre-tensioners control unit
- 6571: side airbag unit (right)
- 6572: side airbag unit (left)
- 6573: driver's lateral satellite
- 6574: passenger's lateral satellite
- 6575: pre-tensioning seat-belt (on the driver's side)
- 6576: pre-tensioning seat-belt (passenger's side)
- 6577: pre-tensioner (rear LH)
- 6578: pre-tensioner (rear RH)
- 6579: central rear pre-tensioner

#### LIST OF COMPONENTS (SECTION 3)

- 6600: headlamp height adjustment control
- 6605: headlight height adjustment unit
- 6610: left-hand headlamp height adjustment motor
- 6615: right-hand headlamp height adjustment motor
- 6616: front body height sensor
- 6617: rear body height sensor
- 6620: vehicle height correction control fuse
- 6621: vehicle height correction motor fuse
- 6625: vehicle high position switch
- 6630: parking brake information relay (vehicle height correction)
- 6631: brake pedal information relay (vehicle height correction)
- 6632: hydraulic circuit fluid pressure switch
- 6635: vehicle height correction control unit-sensor
- 6636: vehicle height correction motor relay
- 6637: vehicle height correction solenoid valve relay
- 6640: vehicle height correction electric pump motor
- 6645: vehicle height correction solenoid valve
- 6646: vehicle height correction fluid level switch
- 6700: differential lock control switch
- 6701: differential lock control solenoid valve (rear)
- 6702: control solenoid valve (change to 4x4)
- 6703: control solenoid valve (staying in 4x4)
- 6705: differential lock fuse
- 6706: control relays (change to 4x4)
- 6707: switch (change to 4x4)
- 6709: reduction gear change closing switch
- 6710: front differential lock position switch
- 6711: closing sensor (change to 4x4)
- 6712: differential lock opening sensor (rear)
- 6715: rear differential lock position switch
- 6720: differential lock control unit
- 6730: front differential lock motor
- 6735: rear differential lock motor
- 6740: differential lock relay



- 6750: controlled differential control unit
- 6755: traction control cut-off switch
- 6760: controlled proportional differential solenoid
- 6800: sun roof switch
- 6801: end of sun roof travel switch
- 6802: end of sun roof tilting switch
- 6803: sun roof slide relay control
- 6804: sun roof half travel control relay
- 6805: sun roof relay
- 6806: sun roof zero point switch
- 6807: sunroof relay in the sunroof assembly
- 6808: sun roof intermediate position switch
- 6810: sun roof motor
- 6811: sun roof one-touch motor
- 6820: sun roof assembly
- 6821: safety auto-reverse sensor
- 6825: sunroof infra-red transmitter
- 6826: sun-roof infra red receiver
- 6830: sunroof control unit
- 6840: left-hand electric quarter light switch
- 6842: left-hand electric quarter light return switch
- 6845: right-hand electric quarter light switch
- 6847: right-hand electric quarter light return switch
- 6850: left-hand electric quarter light motor
- 6855: right-hand electric quarter light motor
- 6860: electric hood ECU
- 6861: electric hood switch
- 6862: electric hood electric pump motor
- 6863: rear section opening solenoid
- 6864: rear section closing solenoid
- 6865: electric hood closing solenoid
- 6866: electric hood opening solenoid
- 6867: cover opening solenoid
- 6868: cover closing solenoid
- 6870: electric hood electric pump motor relay
- 6871: rear section ram switch
- 6872: electric hood ram switch
- 6873: cover ram switch
- 6874: electric hood switch
- 6875: electric hood buzzer
- 6876: electric hood buzzer diode
- 6877: boot open diode
- 7000: front left-hand anti-lock brake sensor
- 7001 power steering fluid pressure switch
- 7005: front right-hand anti-lock brake sensor
- 7010: rear left-hand anti-lock brake sensor
- 7013: gear lever neutral switch
- 7014: rear wheel ABS sensor
- 7015: rear right-hand anti-lock brake sensor
- 7016: ABS acceleration sensor
- 7017: ABS control unit fuse
- 7018: ABS control unit relay
- 7019: idle maintaining simulation resistor
- 7020: anti-lock brake control unit
- 7025: ABS hydraulic unit (GPF)

- 7026: brake assistance electric pump
- 7027: ABS solenoids fuse
- 7028: anti-lock braking system shunt
- 7029: ABS pump fuse
- 7030: electric pump unit
- 7031: electric pump unit relay
- 7040: additional regulation unit (ARU)
- 7041: additional regulation unit electrical board
- 7045: clutch pedal information switch
- 7046: clutch position potentiometer
- 7048: piloted brake servo
- 7049: controlled brake servo control unit
- 7050: traction control ECU
- 7055: traction control hydraulic unit
- 7060: traction control throttle actuator
- 7065: traction control throttle potentiometer
- 7075: traction control cut-off switch
- 7076: ABS switch indicator light relay
- 7077: hill holder cut-off switch
- 7078: hill holder buzzer
- 7080: brake fluid level information diode
- 7090: brake servo vacuum pump
- 7100: power steering servo-regulator
- 7105: variable power assisted steering control unit
- 7110: power steering servo
- 7111: proportional solenoid variable power-assisted steering
- 7112: power steering pressure sensor
- 7113: power steering stop sensor
- 7115: power steering control relay
- 7120: power steering pump electric motor
- 7121: electric pump diode power-assisted steering
- 7125: power steering power relay
- 7200: trip computer-cruise control information relay
- 7201: color display control unit
- 7205: trip computer display switch
- 7210: trip computer
- 7215: multifunction screen
- 7216: multifunction screen key pad
- 7220: clock
- 7222: outside temperature sensor
- 7225: clock + exterior temperature display
- 7226: exterior temperature display
- 7300: cruise control switch
- 7305: cruise control switch
- 7306: cruise control override switch (clutch)
- 7307: cruise control override relay
- 7308: cruise control safety switch (brakes)
- 7309: cruise control circuit shunt - engine check
- 7310: cruise control control unit
- 7311: cruise control fuse
- 7312: cruise control switch indicator light circuit diode
- 7315: cruise control vacuum pump-breather assembly
- 7320: cruise control override solenoid valve
- 7400: external temperature display
- 7500: parking aid ECU

- 7501: laser distance guide
- 7502: laser rangefinder switch
- 7503: speaker (parking aid)
- 7504: rear speakers (parking aid)
- 7505: parking aid cut-off switch
- 7506: proximity sensor (front LH - exterior)
- 7507: proximity sensor (front LH - interior)
- 7508: proximity sensor (front RH - exterior)
- 7509: proximity sensor (front RH - interior)
- 7510: proximity sensor (rear LH - exterior)
- 7511: proximity sensor (rear LH - interior)
- 7512: proximity sensor (rear RH - exterior)
- 7513: proximity sensor (rear RH - interior)
- 7514: buzzer (parking aid)
- 7600: under-inflation detector control unit
- 7605: under-inflation detector re-initialisation switch
- 7700: steering wheel angle sensor
- 7702: front body height sensor
- 7703: rear body height sensor
- 7704: body height potentiometer
- 7705: body height sensor
- 7706: brake pressure sensor
- 7707: accelerator pedal position sensor
- 7708: front wheel movement sensor
- 7709: rear wheel movement sensor
- 7710: suspension switch
- 7711: front right-hand wheel movement sensor
- 7712: front left-hand wheel movement sensor
- 7713: rear right-hand wheel movement sensor
- 7714: rear left-hand wheel movement sensor
- 7715: suspension control unit
- 7716: suspension solenoid valve (single or front)
- 7717: rear suspension solenoid valve
- 7718: roll correction solenoid valve
- 7719: ADAC electro-hydraulic unit (active anti-roll)
- 7720: front left-hand damper actuator
- 7721: shock absorber auto anti-interference -front LH
- 7722: control unit (citroen active roll control system)
- 7723: accelerometer (citroen active roll control system)
- 7724: variable damping accelerometer
- 7725: front right-hand damper actuator
- 7726: damper auto anti-interference - front RH
- 7730: rear left-hand damper actuator
- 7731: shock absorber auto anti-interference (rearLH)
- 7735: rear right-hand damper actuator
- 7736: shock absorber auto anti-interference (rearRH)
- 7739: centralized electronic unit motor
- 7740: suspension electro-hydraulic unit
- 7741: front right-hand suspension solenoid valve unit
- 7742: front left-hand suspension solenoid valve unit
- 7743: rear right-hand suspension solenoid valve unit
- 7744: rear left-hand suspension solenoid valve unit
- 7745: vehicle height selector
- 7746: piloted rear suspension pad solenoid valve
- 7747: front suspension solenoid valve

- 7748: rear suspension solenoid valve
- 7750: suspension control board
- 7760: CAN interface
- 7770: hydraulic fluid level and/ or pressure warning buzzer
- 7800: stability checking ECU
- 7801: stability check cut-off switch
- 7802: stability check relay
- 7803: stability check steering wheel angle sensor
- 7804: accelerometer gyro stability check
- 7805: pre-load pump stability check
- 7806: hydraulic unit stability check
- 7807: brake circuit pressure sensor 1
- 7808: brake circuit pressure sensor 2
- 8000: air conditioning switch
- 8001: air conditioning compressor relay shunt
- 8004: air conditioning cut-off control unit
- 8005: air conditioning compressor relay
- 8006: evaporator thermistor (if separated)
- 8007: pressostat
- 8008: air conditioning engine coolant temperature thermistor
- 8009: freon pressure sensor
- 8010: coolant temperature unit
- 8012: air conditioning cut-off pressure switch
- 8014: idling stability solenoid valve
- 8015: compressor cut-off relay controlled by coolant temperature unit
- 8016: compressor cut off relay controlled by the injection ECU
- 8020: air conditioning compressor
- 8022: air conditioning coolant thermal switch
- 8025: heater panel (if separated)
- 8030: passenger compartment air thermistor
- 8031: coolant thermistor
- 8032: outside air thermistor
- 8033: sunshine temperature sender unit
- 8034: air to footwell temperature sender unit
- 8035: passenger compartment temperature electronic thermostat (if separated)
- 8036: temperature display rheostat (if separated)
- 8037: air vent temperature sender unit
- 8038: luminosity sensor
- 8040: blower speed rheostat (if separated)
- 8043: right-hand blower control module
- 8044: left-hand blower control module
- 8045: blower control module (if separated)
- 8046: blower motor resistor (if separated)
- 8047: blower speed control (if separated)
- 8048: blower relay
- 8050: heater blower motor (if separated)
- 8051: right-hand blower motor
- 8052: left-hand blower motor
- 8060: heater unit
- 8061: heating/air conditioning unit relay
- 8065: mixing flap motor
- 8067: air inlet flap control
- 8068: left-hand air inlet flap reduction motor
- 8069: right-hand air inlet flap reduction motor
- 8070: air inlet flap reduction motor

- 8071: air distribution flap motor
- 8072: ventilation flap motor
- 8073: footwell/demisting flap motor
- 8074: breaker valve
- 8080: air conditioning ECU
- 8090: compressor protection diode
- 8096: additional heating operation information diode
- 8097: fuel heating control switch
- 8098: additional heating
- 8099: additional heating burner
- 8100: front cigar lighter
- 8105: rear cigar lighter
- 8110: heated rear screen switch
- 8112: rear screen demisting sensor
- 8115: heated rear screen relay
- 8116: rear screen heater time switch relay
- 8118: heated rear screen (left)
- 8119: heated rear screen (right)
- 8120: heated rear screen
- 8121: rear screen de-misting motor
- 8125: heated mirror (on the driver's side) (if separated) (electrical)
- 8130: heated mirror (passenger's side) (if separated) (electrical)
- 8140: heated windscreen
- 8141: heated windscreen switch
- 8145: heated windscreen relay
- 8146: heated windscreen timer unit
- 8200: coded anti-start keypad
- 8201: coded anti-start LED
- 8203: relay circuit diode injection control unit supply
- 8205: diagnostic indicator light circuit diode
- 8206: coded anti-start device door circuit diode
- 8207: immobilizer relay for diesel pump
- 8208: immobilizer control unit/transponder
- 8209: transponder coil
- 8210: transponder relay shunt
- 8220: analogue module transponder
- 8221: control module transponder
- 8300: driver's heated seat switch
- 8301: electrically heated seats control unit
- 8302: driver's heated seat rheostat
- 8303: passenger's heated seat rheostat
- 8305: passenger's heated seat switch
- 8306: left-hand rear heated seat switch
- 8307: right-hand rear heated seat switch
- 8308: heated seat relay
- 8310: heated seat (on the driver's side)
- 8311: heated seat thermostat
- 8315: heated seat (passenger's side)
- 8320: heated rear seat
- 8321: heated seat timer relay (driver)
- 8322: heated seat timer relay (passenger)
- 8323: heated seat timer relay (rear LH)
- 8324: heated seat timer relay (rear RH)
- 8325: left rear heated seat
- 8326: right rear heated seat

- 8327: driver's seat cushion heating element
- 8328: driver's seat backrest heating element
- 8329: passenger's seat cushion heating element
- 8330: passenger's seat backrest heating element
- 8331: driver's heated seat control unit
- 8332: passenger's heated seat control unit
- 8333: driver's heated seat sensor
- 8334: passenger's heated seat sensor
- 8401: impedance adaptor
- 8402: aerial lead
- 8403: aerial filter
- 8404: aerial
- 8405: electric aerial
- 8406: electric aerial module
- 8407: duplexer
- 8408: radio amplifier
- 8409: heated rear screen aerial assembly
- 8410: radio
- 8411: radio balance front left/right
- 8412: radio balance front/rear
- 8413: radio control
- 8415: compact disc player
- 8416: compact disc interface
- 8420: front door speakers (on the driver's side)
- 8421: front speakers
- 8422: front door speakers (left)
- 8423: front door speakers (right)
- 8425: front door speakers (passenger's side)
- 8430: speaker (rear LH)
- 8435: speaker (rear RH)
- 8440: left-hand front tweeter speaker
- 8442: front left-hand mid range speaker
- 8443: speaker : boomer (front LH)
- 8445: right-hand front tweeter speaker
- 8447: front right-hand mid range speaker
- 8448: speaker : boomer (front RH)
- 8450: left-hand rear tweeter speaker
- 8452: rear left-hand mid range speaker
- 8453: speaker : boomer (rear LH)
- 8455: right-hand rear tweeter speaker
- 8457: rear right-hand mid range speaker
- 8458: speaker : boomer (rear RH)
- 8460: headphone socket left-hand rear
- 8465: headphone socket right-hand rear
- 8470: police radio electrical supply (front)
- 8471: rear police radio supply 1
- 8472: rear police radio supply 2
- 8475: radio telephone instrument panel
- 8480: radio telephone transmitter-receiver
- 8481: car-phone loudspeaker
- 8482: car-phone microphone
- 8483: car-phone on warning buzzer
- 8484: car phone aerial
- 8485: car-phone key pad
- 8500: navigation control unit

- 8501: GPS aerial
- 8502: on-board navigation system speaker
- 8503: control key pad
- 8504: traffic information unit
- 8505: traffic information switch
- 8600: alarm unit
- 8601: anti-theft alarm key switch
- 8602: interior protection unit (anti-theft alarm)
- 8603: anti-theft alarm switch
- 8604: ultrasonic sensor
- 8605: alarm siren
- 8606: alarm LED
- 8607: ultrasonic transmitter
- 8608: ultrasonic receiver
- 8609: ultrasonic transmitter + alarm LED
- 8610: luggage compartment alarm contact
- 8611: anti-theft alarm system bonnet switch
- 8612: right-hand rear hinged door alarm switch
- 8613: alarm rear left-hand door switch
- 8614: alarm rear right-hand door switch
- 8615: dipped beam supply relay for alarm
- 8616: alarm relay
- 8617: anti-theft alarm warning relay
- 8618: anti-lifting contact
- 8630: passenger compartment protection unit
- 8700: electric sun-blind motor
- 8701: electric blind switch
- 8702: rear electric blind switch
- 9000: central unit
- 9005: left front side lamp station
- 9010: fan unit station
- 9015: right front side lamp station
- 9020: wipe/wash station
- 9025: sensor information station
- 9030: left front door station
- 9031: seat unit
- 9035: instrument panel station
- 9040: display station
- 9045: passenger compartment station
- 9050: right front door station
- 9055: signaling switch station
- 9056: automatic lighting unit
- 9060: wiper switch station
- 9065: console station
- 9070: towing station
- 9075: left tail lamp station
- 9080: tailgate station
- 9085: right tail lamp station

## LIST OF SYMBOLS MULTI ASSEMBLY



Fig: 1

Dials.



Fig: 13

Thermal switch.



Fig: 2

Switch (manual).



Fig: 14

Pressure switch.



Fig: 3

Switch.



Fig: 15

Engine.



Fig: 4

Door aperture switch.



Fig: 16

Pump.



Fig: 5

Relay.



Fig: 17

Compressor.



Fig: 6

Control unit.



Fig: 18

Diode.



Fig: 7

Fuse.



Fig: 19

Solenoid valve.



Fig: 8

Key.



Fig: 20

Bridge block.



Fig: 9

Resistance.



Fig: 21

Hazard warning.



Fig: 10

Variable resistor (sensor).



Fig: 22

Instrument panel.



Fig: 11

Thermistor.



Fig: 23

Keypad.



Fig: 12

Resistance varied by pressure.



Fig: 24

Electric control.





Fig: 25

Sensor.



Fig: 26

Front.



Fig: 27

Rear.



Fig: 28

Front LH.



Fig: 29

Front RH.



Fig: 30

Rear LH.



Fig: 31

Rear RH.



Fig: 32

Rotary connector.



Fig: 33

Caravan attachment.



Fig: 34

Intermittently.



Fig: 35

Capacitor.



Fig: 36

Vehicle immobilisation.



Fig: 37

Rheostat.



Fig: 38

Potentiometer.



Fig: 39

Shunt.



Fig: 40

Generator.



Fig: 41

Interference suppression.



Fig: 42

Terminal box.



Fig: 43

Smart fuse box.



Fig: 44

Driving school.



Fig: 45

Diagnostic socket.



Fig: 46

Sport position.



Fig: 47

Interconnection.

## LIST OF SYMBOLS POWER UNIT



Fig: 1

Battery.



Fig: 14

Engine stopped (diesel).



Fig: 27

Air flow sensor.



Fig: 2

Starter.



Fig: 15

Water in diesel fuel.



Fig: 28

Cooling system.



Fig: 3

Alternator.



Fig: 16

Water in diesel fuel.



Fig: 29

Fan.



Fig: 4

Starting cut-off.



Fig: 17

Glow plug.



Fig: 30

Automatic gearbox.



Fig: 5

Charging socket.



Fig: 18

Diesel injection pump.



Fig: 31

Engagement.



Fig: 6

Battery.



Fig: 19

Injector.



Fig: 32

Engagement.



Fig: 7

Battery discharged.



Fig: 20

Engine failure.



Fig: 33

Differential lock.



Fig: 8

Ignition system.



Fig: 21

TDC sensor.



Fig: 34

Gear lever (automatic gearbox).



Fig: 9

Carburettor.



Fig: 22

Cylinder reference sensor.



Fig: 35

Electrical incident.



Fig: 10

Ignition advance.



Fig: 23

Vehicle speed sensor.



Fig: 36

Forward gear.



Fig: 11

Diesel.



Fig: 24

Piezo-electric.



Fig: 37

Reverse.



Fig: 12

Coil.



Fig: 25

Oxygen sensor.



Fig: 38

LPG (liquid petroleum gas).



Fig: 13

Accelerator (manual).



Fig: 26

Choke control.



Fig: 39

LPG (liquid petroleum gas).

# LIST OF SYMBOLS EXTERIOR LIGHTING & SIGNALING



Fig: 1

Rear fog lamps.



Fig: 2

Stop lamps.



Fig: 3

Additional stop lamps.



Fig: 4

Stop lamps rear LH.



Fig: 5

Stop lamps rear RH.



Fig: 6

Reversing lamps.



Fig: 7

Direction indicator.



Fig: 8

Left-hand direction indicator.



Fig: 9

Right-hand direction indicator.



Fig: 10

Hazard warnings.



Fig: 11

Left-hand side repeater flasher.



Fig: 12

Right-hand side repeater flasher.



Fig: 13

Running lights.



Fig: 14

Horns.



Fig: 15

Pedestrian buzzer.



Fig: 16

General lighting stalk.



Fig: 17

Dipped beam.



Fig: 18

Main beam.



Fig: 19

Side lamps/orange lamp.



Fig: 20

Front fog lamps.



Fig: 21

Front left side light.



Fig: 22

Front right side light.



Fig: 23

Left-hand tail lamp.



Fig: 24

Right-hand tail lamp.



Fig: 25

Rear left-hand light on tailgate.



Fig: 26

Rear right-hand light on tailgate.



Fig: 27

Number plate lamp.



Fig: 28

Number plate right-hand lamp.



Fig: 29

Rotating lamp.



Fig: 30

Blown bulbs.



Fig: 31

Rear facing flashing stop lights.



Fig: 32

Left-hand tail lamp.



Fig: 33

Right-hand tail lamp.



Fig: 34

Front fog lamps cut-off.



Fig: 35

Day/night.



Fig: 36

Rear hinged door (left).



Fig: 37

Rear hinged door (right).



Fig: 38

Tailgate.

## LIST OF SYMBOLS INTERIOR LIGHTING



Fig: 1

Central courtesy lamp.



Fig: 8

Front courtesy lamp.



Fig: 2

Courtesy lamp (front LH).



Fig: 9

Rear courtesy lamp.



Fig: 3

Courtesy lamp (front RH).



Fig: 10

Map reading lamp (centre).



Fig: 4

Rear left-hand courtesy lamp.



Fig: 11

Map reading lamp (front LH).



Fig: 5

Rear right hand courtesy lamp.



Fig: 12

Map reading lamp (front RH).



Fig: 6

Left hand central courtesy light.



Fig: 13

Map reading lamp (rear LH).



Fig: 7

Right hand central courtesy light.



Fig: 14

Map reading lamp (rear RH).



Fig: 15

Door aperture switch (front LH).



Fig: 16

Door aperture switch (front RH).



Fig: 17

Door aperture switch (rear LH).



Fig: 18

Door aperture switch (rear RH).



Fig: 19

Vanity mirror lighting.



Fig: 20

Bulb.

## LIST OF SYMBOLS DRIVER INFORMATION



Fig: 1

Coolant temperature.



Fig: 2

Stop warning lamp.



Fig: 3

Screenwash level.



Fig: 4

Coolant level.



Fig: 5

Water battery.



Fig: 6

Oil pressure.



Fig: 7

Engine oil temperature.



Fig: 8

Engine oil level.



Fig: 9

Engine oil level.



Fig: 10

Level/engine oil pressure.



Fig: 11

Engine oil temperature display.



Fig: 12

Engine oil level gauge.



Fig: 13

Tachometer.



Fig: 14

Air temperature.



Fig: 15

Clogging of the filter element in the air filter.



Fig: 16

Clogging of the filter element in the air filter.



Fig: 17

Turbocharger.



Fig: 18

Turbocharge pressure gauge.



Fig: 19

Exhaust gas recirculation.



Fig: 20

Low fuel level.



Fig: 21

Fuel gauge.



Fig: 22

Fuel pump.



Fig: 23

Side lights.



Fig: 24

Handbrake.



Fig: 25

Brake system failure.



Fig: 26

Handbrake / brake fluid level.



Fig: 27

Brake pad wear.



Fig: 28

Brake pads.



Fig: 29

Gearbox fluid temperature.



Fig: 30

Buzzer.



Fig: 31

Overheating of catalytic converter.

# LIST OF SYMBOLS WIPE-WASH



Fig: 1

Windscreen wiper.



Fig: 7

Screen wiper (rear LH).



Fig: 2

Wiper timer.



Fig: 8

Screen wiper (rear RH).



Fig: 3

Rain sensor.



Fig: 9

Rear screen-wash.



Fig: 4

Screen wash (front).



Fig: 10

Rear screen wiper/wash.



Fig: 5

Front screen wipe/wash.



Fig: 11

Headlamp wipe-wash/headlamp wash.



Fig: 6

Rear wiper.

# LIST OF SYMBOLS ASSISTANCE MECHANISM



Fig: 1  
Electric windows.



Fig: 2  
Electric window.



Fig: 3  
Electric window closing switch.



Fig: 4  
Electric window opening switch.



Fig: 5  
Electric windows lock (rear).



Fig: 6  
Safety auto-reverse window.



Fig: 7  
Locking.



Fig: 8  
Locking of the doors.



Fig: 9  
Opening the doors.



Fig: 10  
Door aperture (front LH).



Fig: 11  
Door aperture (front RH).



Fig: 12  
Door aperture (rear LH).



Fig: 13  
Door aperture (rear RH).



Fig: 14  
Opening the doors (front).



Fig: 15  
Bonnet opening.



Fig: 16  
Rear luggage compartment opening.



Fig: 17  
Fuel filler cap.



Fig: 18  
High frequency receiver for central locking.



Fig: 19  
Infra red door locking receiver.



Fig: 20  
Opening the doors (rear).



Fig: 21  
Infra-red transmitter.



Fig: 22  
Seat.



Fig: 23  
Rear seat (left).



Fig: 24  
Rear seat (right).



Fig: 25  
Slide adjustment (seat).



Fig: 26  
Front cushion adjustment (seat).



Fig: 27  
Rear cushion adjustment (seat).



Fig: 28  
Backrest adjustment (front seat).



Fig: 29  
Height adjustment (front seat).



Fig: 30  
Arm rest adjustment.



Fig: 31  
Side retainers adjustment.



Fig: 32  
Upper lumbar adjustment.



Fig: 33  
Lower lumbar adjustment.



Fig: 34  
Electric head-restraint.



Fig: 35  
Head restraint (rear LH).



Fig: 36  
Head restraint (rear RH).



Fig: 37  
Electric mirror.



Fig: 38  
Indexed exterior mirror.



Fig: 39  
Fold-back mirror.



Fig: 40  
Electric interior mirror.



Fig: 41  
Steering wheel.



Fig: 42  
Steering column.



Fig: 43  
Steering column (horizontal adjustment).



Fig: 44  
Steering column (vertical adjustment).



Fig: 45  
Seat belt locking.



Fig: 46  
Driver's side airbag.



Fig: 47  
Passenger's side airbag.



Fig: 48  
Airbag.



Fig: 49  
Pre-tensioner (rear LH).



Fig: 50  
Pre-tensioner (rear RH).



Fig: 51  
Central rear pre-tensioner.



Fig: 52  
Headlamp height corrector.



Fig: 53  
Body height sensor.



Fig: 54  
Sun roof.



Fig: 55  
Sun roof (closing).



Fig: 56  
Sun roof (toe-out).



Fig: 57  
Electrically operated hood.

# LIST OF SYMBOLS DRIVER AIDS



Fig: 1

Anti-lock brakes.



Fig: 7

Front wheel sensors.



Fig: 13

Exterior temperature display.



Fig: 2

Front LH wheel sensor.



Fig: 8

Traction control.



Fig: 14

Tyre deflation sensor.



Fig: 3

Front RH wheel sensor.



Fig: 9

Range.



Fig: 15

Heavy duty suspension.



Fig: 4

Rear LH wheel sensor.



Fig: 10

Digital clock.



Fig: 16

Hydroactive suspension.



Fig: 5

Rear RH wheel sensor.



Fig: 11

Analogue clock.



Fig: 17

Accelerator pedal.



Fig: 6

Rear wheel sensor.



Fig: 12

Cruise control.



Fig: 18

Shock absorbers.



## LIST OF SYMBOLS DRIVING COMFORT



Fig: 1

Air conditioning.



Fig: 15

Heated resistor.



Fig: 29

Balance.



Fig: 2

Air conditioning switch.



Fig: 16

Heated rear screen (left).



Fig: 30

Speaker (front LH).



Fig: 3

Air recirculation.



Fig: 17

Heated rear screen (right).



Fig: 31

Speaker (front RH).



Fig: 4

Air inlet flap reduction motor.



Fig: 18

Coded anti-start.



Fig: 32

Speaker (rear LH).



Fig: 5

Temperature adjustment.



Fig: 19

Transponder.



Fig: 33

Speaker (rear RH).



Fig: 6

Sunshine.



Fig: 20

Heated seat.



Fig: 34

Headphones.



Fig: 7

Footwell ventilation.



Fig: 21

Heated seat (rear LH).



Fig: 35

Socket.



Fig: 8

Additional heating.



Fig: 22

Heated seat (rear RH).



Fig: 36

Control on the steering wheel.



Fig: 9

Additional heating.



Fig: 23

Radio.



Fig: 37

Micro.



Fig: 10

SNOW position.



Fig: 24

Speaker.



Fig: 38

Compact disc player.



Fig: 11

Lighter.



Fig: 25

Electric aerial.



Fig: 39

Navigation.



Fig: 12

Heated rear screen.



Fig: 26

Fuse.



Fig: 40

Alarm.



Fig: 13

Heated windscreen.



Fig: 27

Radio telephone.



Fig: 41

Switching off alarm.



Fig: 14

Heated mirror.



Fig: 28

Compact disc.



Fig: 42

Ultrasonic transmitter.

## LIST OF HARNESSES

- 01 CBP battery positive cable
- 02 CBN battery negative cable
- 03 CB/AV connecting cable, front batteries
- 04 CB/CE connecting cable, batteries to electronic unit
- 05 CE/MOT connecting cable, electronic unit to motor
- 06 CB/AV/AR connecting cable, front batteries to rear
- 07 FMS earth lead
- 10 PR main harness
- 11 FD daylight running lamp harness
- 12 US FR brake pad wear harness
- 13 AVERT/S horn harness
- 14 RG/V cruise control harness
- 15 F/AV front panel harness
- 16 GMV fan harness
- 17 BR/AV front fog light harness
- 17 BR/AV/C front fog lamp supplementary harness
- 18 BVA automatic gearbox harness
- 19 BT/EL electronic control unit harness
- 19 BT/EL/C additional electronic control unit harness
- 20 MOT engine harness
- 21 PTC heating extension harness
- 22 MOT/C additional engine harness
- 23 BR/HY hydraulic buzzer harness
- 24 BR/SV overspeeding buzzer harness
- 25 PCH preheating harness
- 26 GI heated jet harness
- 27 EV/AV windscreen wiper harness
- 28 CAPT/PL rain detector harness
- 30 ABR ABS harness
- 32 SUSP suspension harness
- 36 ALA/A alarm harness
- 39 DA power steering harness
- 43 A/E harness driving school
- 44 CSL console harness
- 45 CAPT/VOL internal sensor harness
- 46 HAB passenger compartment harness
- 47 ECL V/P glove-box lighting harness
- 48 PLAF/C additional courtesy light harness
- 49 P/B/C additional fascia harness
- 50 P/B fascia harness
- 51 J gauge harness
- 52 PLAF courtesy lamp harness
- 53 SAC air bag harness
- 53 SCA additional airbag harness
- 53 SLD right-hand airbag harness
- 53 SLG left-hand airbag harness
- 54 CEINT pre-tensioning seat belts harness
- 54 CEINT/G left-hand pre-tensioning seat belt harness
- 54 CEINT/D right hand pre-tensioning seat belt harness
- 55 SGC driver's seat harness
- 56 SGP passenger's seat harness
- 57 SG/AR rear seat harness
- 57 SG/AR/G left rear seat harness

- 57 SG/AR/D right rear seat harness
- 58 NSC driver's heated seat harness
- 58 NSP passenger's heated seat harness
- 59 CLC additional heater harness
- 59 CLM heater harness
- 60 P/C driver's door harness
- 61 PARGB left-hand hinged rear door harness
- 62 PR/G rear left-hand door harness
- 63 PARDB right-hand hinged rear door harness
- 65 P/P front passenger door harness
- 67 PR/D rear right-hand door harness
- 68 TO sunroof's harness
- 71 AR rear harness
- 71G AR/G rear left-hand harness
- 71D AR/D rear right-hand harness
- 72 F/STP brake light harness
- 73 HP/AR rear speaker harness
- 73 ACD radio CD player harness
- 73G HP/AR/G left rear speaker harness
- 73D HP/AR/D right rear speaker harness
- 74 EV/VL tailgate wiper harness
- 76 VL tailgate harness
- 76G VL/G tailgate left-hand harness
- 76D VL/D tailgate right-hand harness
- 79 COF luggage compartment harness
- 80 AR/SP rear harness under floor
- 81 TAC charging flap harness
- 84 CAP EL electric hood harness
- 85 ECL number plate illumination harness
- 86 BR/CAP electric hood buzzer harness
- 90 CHR/MT engine tachograph harness
- 91 CHR/PB fascia tachograph harness
- 95 GPC additional LPG harness
- 95 GPL LPG harness